

# MARRS Throttle Addresses

In a DCC system each throttle or cab must have a unique address. The club maintains a binder with tags for all available addresses. Each time you use your throttle on a MARRS layout, you **must** select and set a cab address. Simply select a tag of the appropriate range<sup>1</sup> from the binder and set the address<sup>2</sup> in your throttle. Hang the tag from your throttle cord or another convenient location and run your trains. Return the tag to the binder when you are done running for your time slot or for the day. While the DCC superintendent (Dave T) is always willing to help with DCC questions, it is best if you know how to set the address on your throttle and its other functions.

---

1 The ranges for each type of throttle are:

- Radio ProCab throttles 2-17
- Radio Cab0xx throttles 18-49
- Tethered throttles 18-49 if available, 50-63

2 Setting the cab address –

- ProCab – Press and hold the “Select Loco” button while plugging into the cab bus UTP. Enter the desired address and press “Enter”. Unplug from the UTP or press “Prog/Esc”.
- Cab 04 – Press and hold the “Select Loco” button while plugging into the cab bus UTP. The LED will begin to flash. Press “1”. The LED will flash at a slower rate. Enter the desired address and press “Enter”.
- Cab 06 – Press and hold the “Select” button while plugging into the cab bus UTP. Enter the desired address and press “Enter”. Unplug from the UTP or press “Shift/Esc”.